



Door Interior Trim**Service Guide****Front Door Interior Trim Panel****Remove**

1. Disconnect the negative battery cable.
2. Pry off the inner handle screw trim cover and the front door armrest screw trim cover.

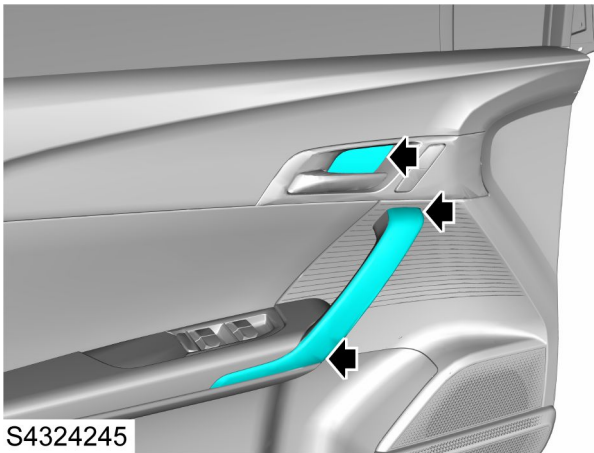


S4324245

3. Remove 3 screws fixing the front door interior trim panel to the door.

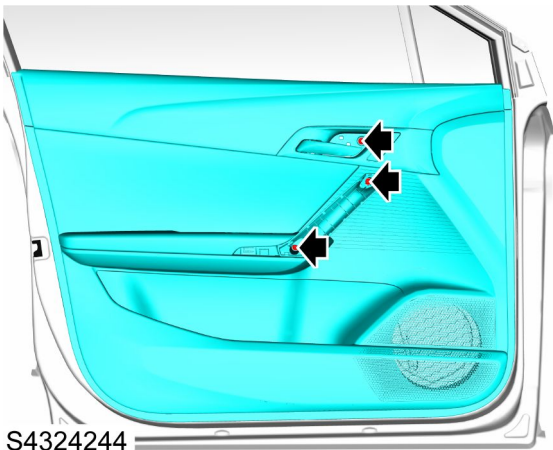


S4324244

4. Pry off the front door window regulator switch, and disconnect the harness connector from the back.

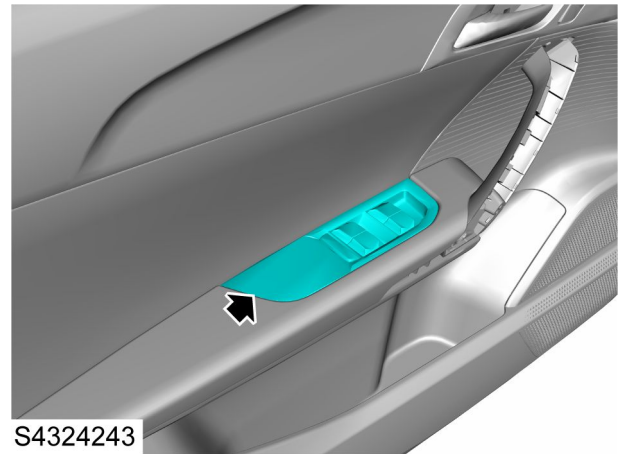

S4324243

5. Pry off the clip fixing the front door interior trim panel to the door, remove and discard the clip.

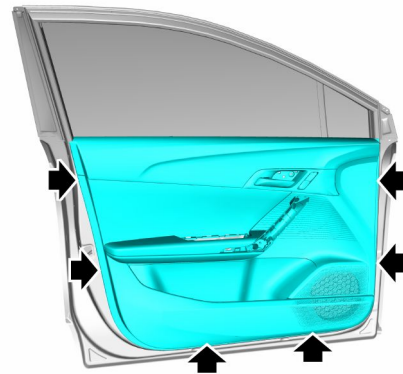

S4324242

6. Disconnect the stay wire of the interior handle cable assembly, disconnect the harness connector, and remove the front door interior trim panel.